



Table of Contents

Pat-Trap® Safety 1

Trap House Specifications 2

Installation of Pat-Trap machine and Hydraulic Pump..... 4

Serial # Location 5

Pat-Trap Machine Weight and Dimensions..... 5

Removal/Replacement of Turret 6

Mounting the Power Control Box..... 6

Connecting the Trap to the Power Source 7

How the Pat-Trap® works 8

Pat-Trap Switch Identification 10

Turning the Pat-Trap® On & Off 11

Loading the Pat-Trap® 11

Pat-Trap® Singles Height 13

Pat-Trap® Doubles Height..... 15

Adjustment for Pat-Trap® Doubles..... 16

Pat-Trap® Wobble Settings 17

Change over to Wobble Setting 18

Setting a Target Distance/Speed 19

Setting Minimum Target Distance..... 20

Adjustment Height of Targets..... 22

Angle Adjustments 23

Position of the Roller Plates 25



Table of Contents Cont.

Target Brush Maintenance.....	28
Cold Weather Adjustment, Temperature Release Time Stopping the Throw Arm on the Brake.....	29
Adjusting Release Time – Correction of Cycling Problem	30
Assembly and Maintenance of the Throw Arm Brake	32
Removal of Throw Arm	33
Disconnecting the Uni-Band (Main Spring) from the Clutch	34
Installation of the Throw Arm	34
Maintenance of the Cocking Pin	36
Installation of the “XXX”Doubles Finger	37
Replacement/Removal of Main shaft Clutch Assembly	39
Changing a Pair of Uni-Bands on a Main Shaft Clutch System	43
Assembly/Installation of the Uni-Band (Main Spring) to the Main Shaft Clutch.....	45
Replacement of the Elevator Extension Spring	48
Replacement of the Elevator Compression Spring	49
Throw Arm Shaft Bearing Maintenance	50
Hydraulic Valve Identification – Standard Trap	51
Hydraulic Valve Identification- Wobble Trap	52
Soft Shift Valve Wiring Guide (Oscillation/Wobble)	53
Single Solenoid Valve (Throw Arm/Turret) Wiring Guide	54
Replacement of a Hydraulic Valve	55
Wiring Guide for Field Angle Limit Switches (#11 & #12)	56



Table of Contents Cont.

Replace a Field Angle Limit Switch 57

Wobble Wiring Guide for Up and Down Limit Switches (#11A & #12A).. 58

Replacement of Oscillation Cylinder 60

Replacement of Wobble Cylinder 62

General Maintenance Appendix I

Procedure to Flush Hydraulic Oil Appendix II

Timing of the Pinion..... Appendix III

Assembly of the Pinion and Sprocket.....Appendix IV

Pat-Trap Wiring Diagram & Wobble Wiring DiagramAppendix V

Drying Out a Pat-Trap after a flood.....Appendix VI

Trouble Shooting.....Appendix VII